



Walkstool spare parts


## Instructions for attaching a new rubber foot

---

1. Remove the old rubber foot if it is still attached.

---

2. The lower leg should have a plastic end attached. If not, attach a plastic end to the lower leg by using a hammer. The plastic end will protect the rubber foot from being damaged by the aluminum tube.



---

3. Attach the rubber foot to the lower leg. Use a hammer for the last centimeter, as it is important that the rubber foot is fully attached to the lower leg.

---



*Headoffice*

SCANDINAVIAN TOUCH AB  
BJÖRKALLÉN 17, SE-142 66 TRÅNGSUND, SWEDEN  
PHONE +46 8 676 07 00  
www.walkstool.com




*Production & Administration*





SCANDINAVIAN TOUCH AB  
LINDHAGSGATAN 5C, SE-531 40 LIDKÖPING, SWEDEN  
PHONE +46 510 54 77 99  
E-MAIL info@walkstool.com



# Walkstool®

Comfort models

					
1	2	3	4	5	6
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

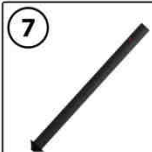
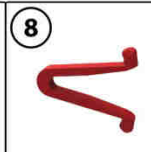
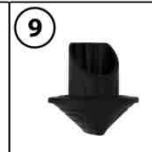
			
7	8	9	10
Lower leg	Red spring	Plastic end	Rubber foot



# Walkstool®

Basic models

					
1	2	3	4	5	6
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

		
7	8	9
Lower leg	Red spring	Plastic foot

